

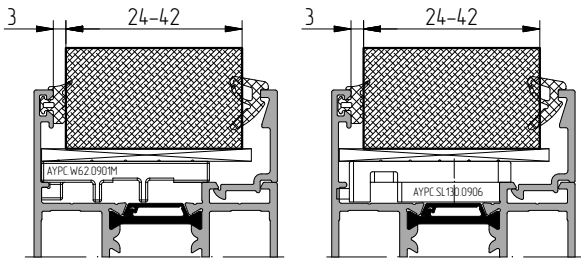
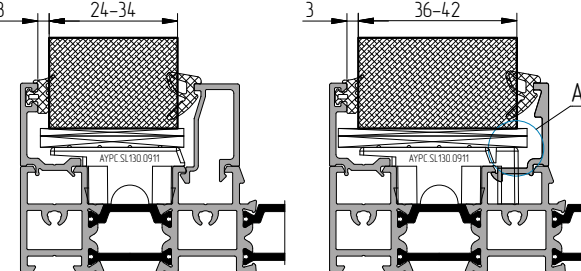
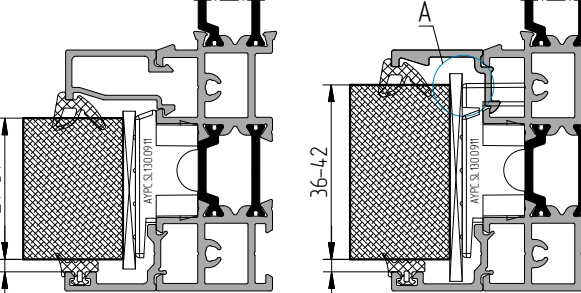
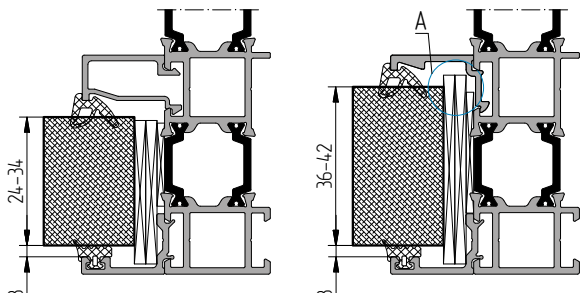
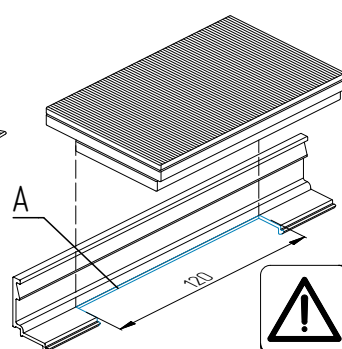


Таблица применения опорных и рихтовочных подкладок под заполнение створки и рамы

Система профилей	Толщина заполнения, мм	Подкладка опорная	Подкладка рихтовочная
 АУРС.SL130.0201, АУРС.SL130.0202, АУРС.SL130.0203, АУРС.SL130.0204, АУРС.SL130.0205, АУРС.SL130.0301	24-26	АУРС.W62.0901М или АУРС.SL130.0906	100x32x3
	28-34		100x38x3
	36-38		100x44x3
	40-42		100x50x3
 АУРС.SL130.0103, АУРС.SL130.0104, АУРС.SL130.0107, АУРС.SL130.0108	24-26	АУРС.SL130.0911	100x32x3 100x32x2
	28-34		100x38x3 100x38x2
	36-38		100x44x3 100x44x2
	40-42		100x50x3 100x50x2
 АУРС.SL130.0104, АУРС.SL130.0108	24-26	АУРС.SL130.0911	100x32x3
	28-34		100x38x3
	36-38		100x44x3
	40-42		100x50x3
 АУРС.SL130.0105, АУРС.SL130.0109, АУРС.SL130.0206	24-26	-	100x22x2 100x32x3
	28-34		100x22x2 100x38x3
	36-38		100x32x2 100x44x3
	40-42		100x32x2 100x50x3

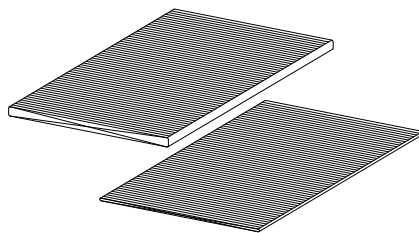

Для правильного позиционирования установить на силикон

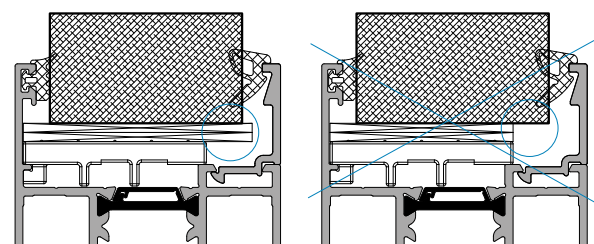