

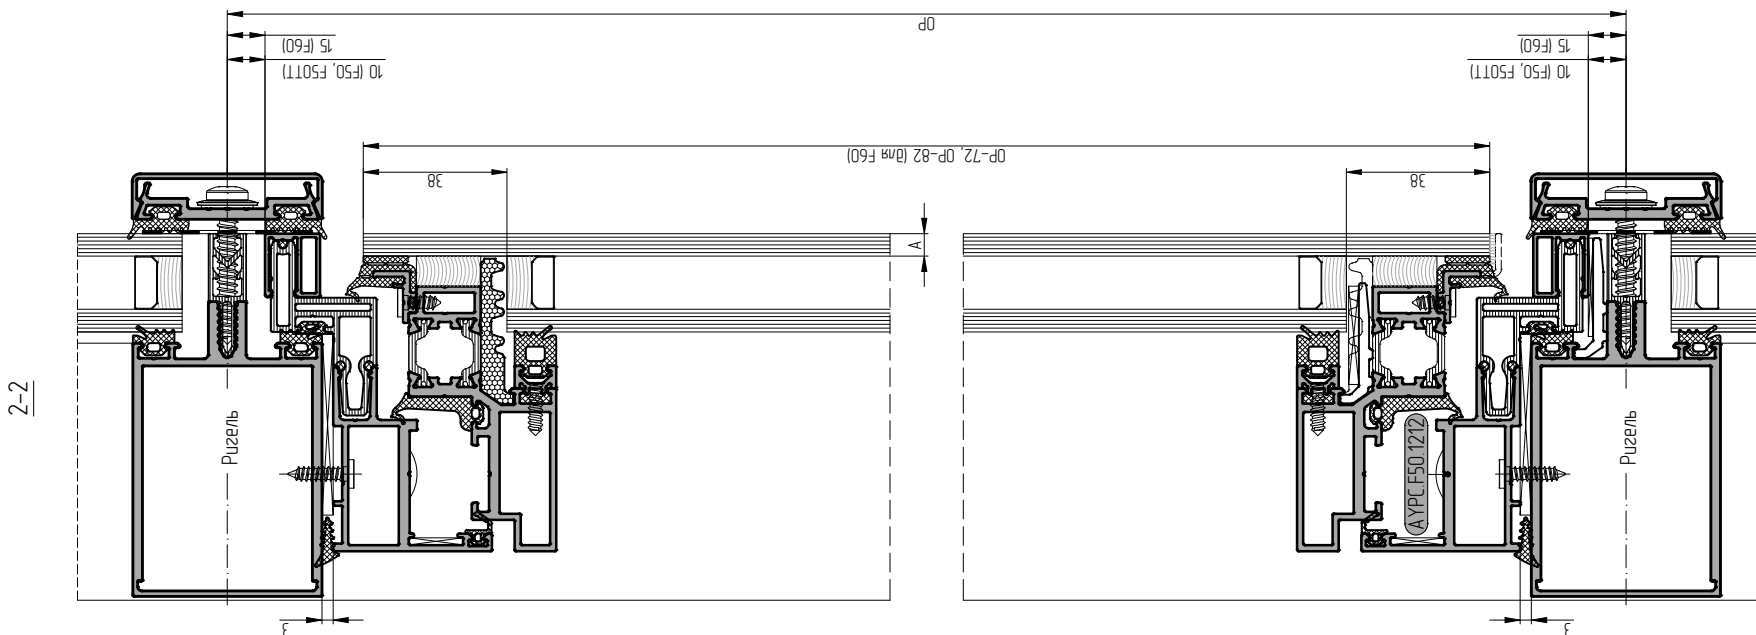
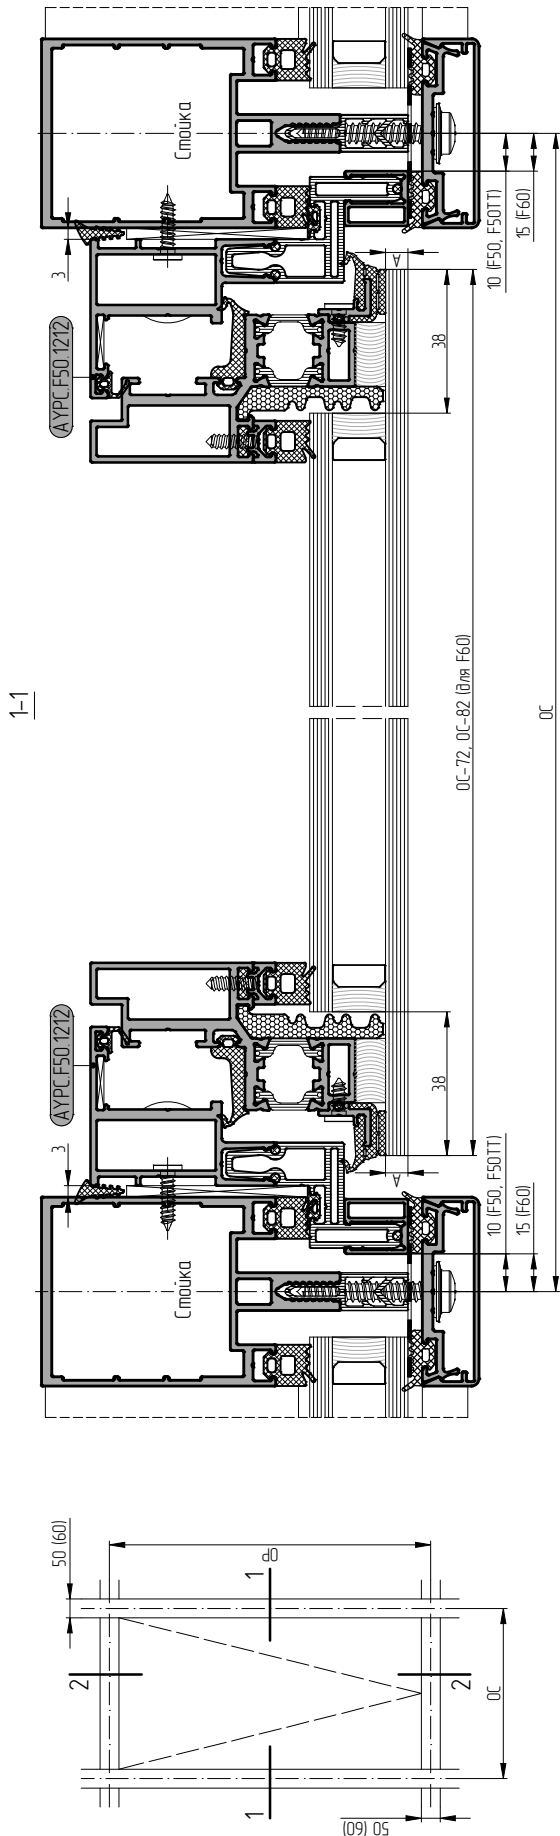




	Артикул	Сечение	Угол заделки	Размер, мм		Кол-во, шт.
				F50/F50TT	F60	
профиль	АУРС F50 1212			OC-56	OC-66	2
				OP-56	OP-66	2
				OC-23	OC-33	2
				OP-23	OC-33	2
профиль	АУРС F50 1709** / АУРС F50 1710***			OC-20	OC-30	2
				OP-20	OP-30	2
				OC-96	OC-106	2
				OP-96	OP-106	2
сборка	АУРС F50 1815			OC-77	OC-87	1
				OP-77	OP-87	2
				130	130	2
				OC-537	OC-547	1
сборка	АУРС F50 2016			100	100	2
				OC-162	OC-162	2
				OP-162	OP-162	2
				2x(OC-OP-54)+1%	2x(OC-OP-74)+1%	1
рама	АУРС SL160 094.8			2x(OC-OP-115)+1%	2x(OC-OP-135)+1%	1
				2x(OC-OP-145)+1%	2x(OC-OP-165)+1%	1
				2x(OC-OP-252)+1%	2x(OC-OP-272)+1%	1
				OC-35 (для FRK223)	OC-45 (для FRK223)	2
сборка	АУРС F50 0701*			OP-35 (для FRK223)	OP-45 (для FRK223)	2
				OP-26	OP-36	2
				2x(OC-OP-100)+1%	2x(OC-OP-120)+1%	1
				OC-164)+1%	OC-174)+1%	2
сборка	АУРС F50 1959			OP-164)+1%	OP-174)+1%	2
				OC-62.5	OC-72.5	2
				OP-62.5	OP-72.5	2
				OC-152)+1%	OC-162)+1%	2
сборка	АУРС F50 199*			80	80	4
				OC-134	OC-144	1
				OC-554)/2	OC-564)/2	2
				OP-24.5	OP-25.5	2
сборка	АУРС SL160 094.8			OC-152	OC-162	2
				OP-152	OP-162	2
				40x40	40x40	4
				OC-96	OC-106	2
сборка	Подкладка рихтовочная			100x50x3	100x50x3	4+OC-OP/200
				31	31	4
				36x36	36x36	4
				10	10	4
сборка	АУРС F50 1950-03			18.4 (для АУРС F50 1908)	18.4 (для АУРС F50 1908)	4
				30.4 (для АУРС F50 1909)	30.4 (для АУРС F50 1909)	
				42.4 (для АУРС F50 1910)	42.4 (для АУРС F50 1910)	
				52.4 (для АУРС F50 1911)	52.4 (для АУРС F50 1911)	
сборка	АУРС F50 1950-03			5	5	4
				26.5	26.5	4
				100	100	2
				100x26x3 / 100x38x3	100x26x3 / 100x38x3	2
сборка	АУРС F50 0941 / АУРС F50 0941-02			100x50x3 / 100x62x3	100x50x3 / 100x62x3	8
				4x6	4x6	24
				5x10	5x10	8+2OC-OP/200
				3.9x10	3.9x10	4+OC-OP/200
сборка	АУРС F50 0952-01 / АУРС F50 0952-03			Ø8	Ø8	4+OC-OP/200
				3.9x16	3.9x16	4+OC-OP/200
				3.9x16	3.9x16	4+OC-OP/200
				3.9x16	3.9x16	4+OC-OP/200

